


NovoSeven RT

Factor VIIa Recombinant

Components:

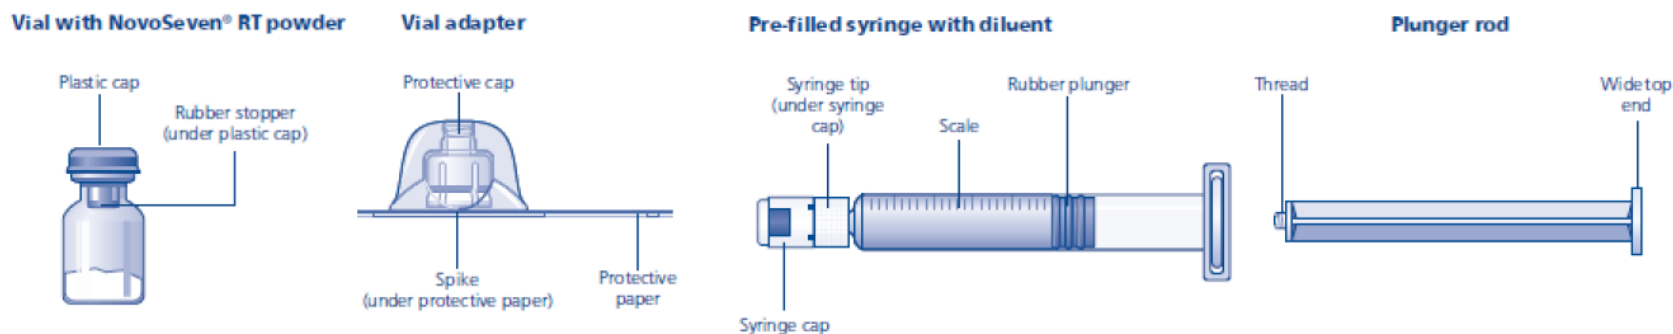

Steps:

1. Remove plastic cap from vial and wipe rubber stopper on vial with alcohol.
2. Attach vial adapter
 - a. Placing vial on flat surface, turn over protective cap and spike vial. Squeeze protective cap and remove protective cap.
3. Attach plunger rod to syringe, turning clockwise until resistance is felt.
4. Remove syringe cap until perforation breaks and screw pre-filled syringe onto adapter.
5. Mix powder with diluent.
 - a. Keep plunger rod pressed down and swirl, **DO NOT SHAKE** as the preparation will foam. Don't use if visible particles present.
 - b. Keep plunger rod pushed in, turn syringe with vial upside down.
 - c. Allow plunger rod to move back on its own while mixed solution fills the syringe.
 - d. Pull plunger slightly downward to draw mixed solution into syringe.
6. Unscrew vial adapter with the vial.
7. Inject over 2-5 minutes. **Administer through a stopcock.** The set's syringe is compatible with a stopcock, but not with needleless adaptors